

TELESCOPIC TREE PRUNER USER INSTRUCTION

Item no.: 0242968



Step 1:

Your tree pruner includes one saw blade and telescopic handle.



Step 2:

Unscrew wing nut as shown in above image.




Step 3:

Mount the saw blade in position.



Step 4:

Secure the wing nut to hold saw blade in place.

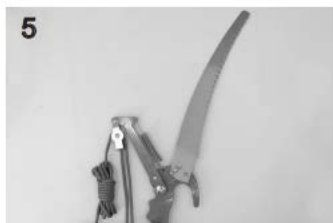

Step 5:

Your tree pruner is now ready to use.

